

## PORTABLE WELDING SCREEN COMPLETE WITH CURTAIN


### ASSEMBLY INSTRUCTIONS

#### CONTENTS:

- 4 x Round straight tubes for connection to the corner pieces (A);
- 2 x Round angled tubes to fit the top corner (B);
- 2 x Swivel connectors at the side to join frames together if required (C);
- 2 x Round angled tubes to fit the bottom corner (D);
- 2 x Square straight tubes to form supports at the base section (E);
- 4 x Wheels to fit under the base section (F);
- 4 x Screw caps to secure the wheels (G);
- 8 x Spring-pins (H);
- 2 x Snaps (I);

**PART NO.**  
**EZFRGREEN**  
**EZFRAMBER**

#### ASSEMBLY DIAGRAM

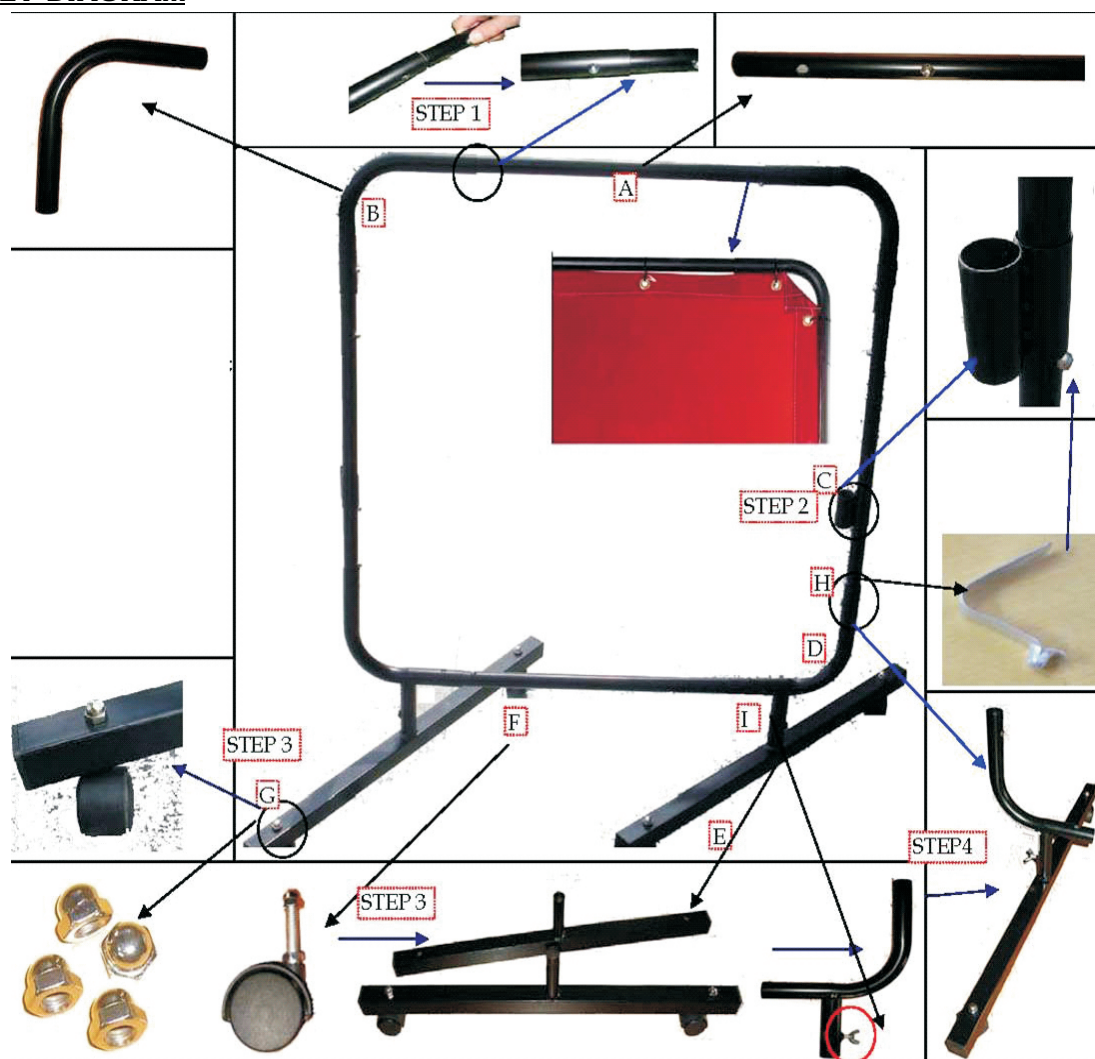

#### INSTRUCTIONS

- STEP 1.** Insert the straight tubes (A) (smaller diameter) into the top corner pieces (B); Repeat as STEP 1 with bottom corner pieces (D)
- STEP 2.** Fix the swivel connectors (C), (you choose the position) to the side section tubes (A);
- STEP 3.** Fix the wheels (F) onto the base sections (E) using screw caps (G);
- STEP 4.** Connect the fixed round base frame section onto the straight ones. Now connect the curtain to the frame using the cable ties provided.